



## Window & Door Alarm

Item No. 86974

### Operation


This unit is operated by 3 x 1.5V LR44 button cell batteries which are included with the unit.

When the alarm sound becomes distorted or the sound level drops this may be an indication that the batteries need replacing.

To insert the batteries, open the battery door located on the front of the unit.

Be sure to observe the correct polarity when inserting the batteries.

Please note: The unit will not work if the batteries are inserted incorrectly.

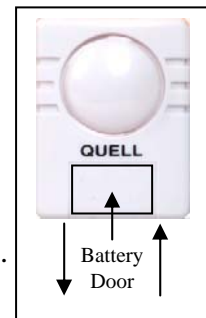

### Installation

Select a suitable position for the Quell Window & Door Alarm ensuring that it will not obstruct the normal operation of the window or door. **Also ensure that the gap between both sections of the alarm is no more than 8mm.** If the gap is more than 8mm the alarm will not operate correctly and the alarm will sound continuously. Affix the main section of the window / door alarm to the door or window and the magnetic bar to the door or window frame, using the double sided tape supplied.



### Alarm Mode

Move the slide switch to the ON position. When the door or window is opened the alarm will sound.

To turn off the alarm, close the door or window or move the slide switch to the OFF position.



Unit 22, 670 Gympie Rd Lawnton  
www.technoworx.com.au  
Ph: 07 3881 2060